

# Shoe Display Shelf Installation



You receive 8 pins instead of 4 pins for this display shelf. Use only 4 of either pin type depending on the slope you want. The remaining pins are not needed.


Components Include:

- 1 - Shoe Display Shelf
- 4 - Standard Shelf Pins
- 4 - Short Pins w/Plastic Sleeve

**NOTE:** Use Standard Pins if you want a slight slope to display your shoes. Use Short Pins w/Plastic Sleeve if you want a severe slope to display your shoes.




## Using Standard Pins:

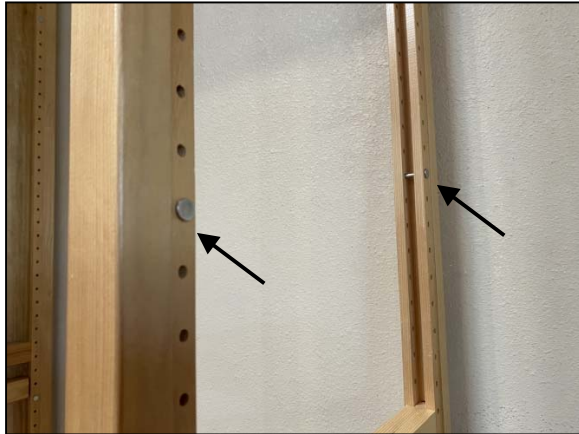

Use these 4 pins when you only want a slight slope with your Shoe Display Shelf (1" to 2").


## Display Shoes on a Slight Slope:

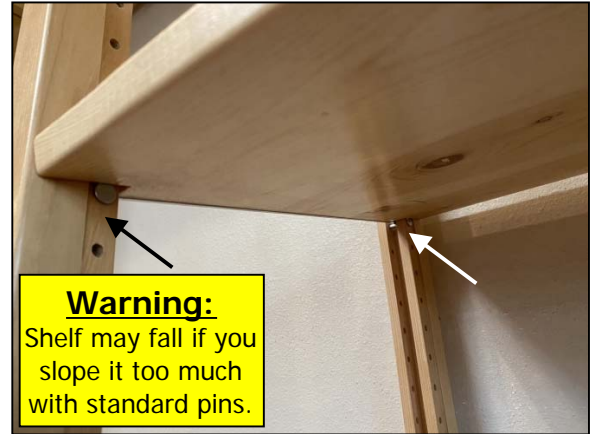

**Warning:**  
Shelf may fall if you slope it too much with standard pins.


Metal end channels of shelf are supported by standard pins.

## Using Short Pins with Plastic Sleeve:

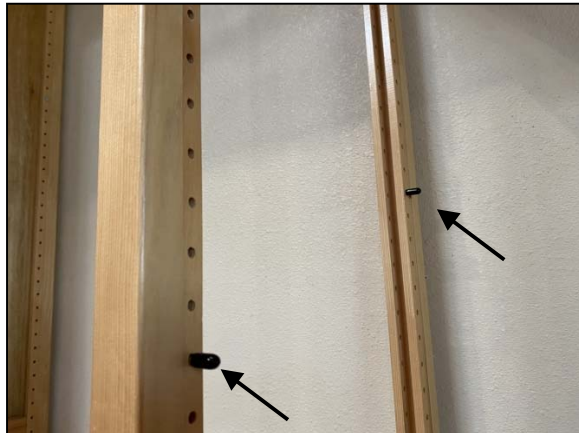

Use these 4 pins when you want a severe slope with your Shoe Display Shelf (3" or more).

## Display Shoes on a Severe Slope:

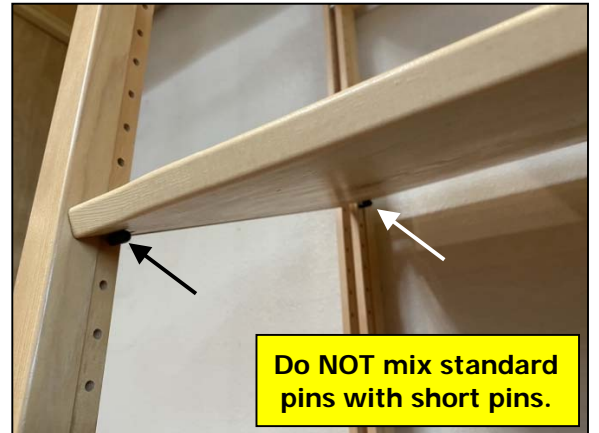

**Do NOT mix standard pins with short pins.**

Shelf rests directly on the plastic sleeve of these shorter pins.