



Drawer Installation


Components Include:

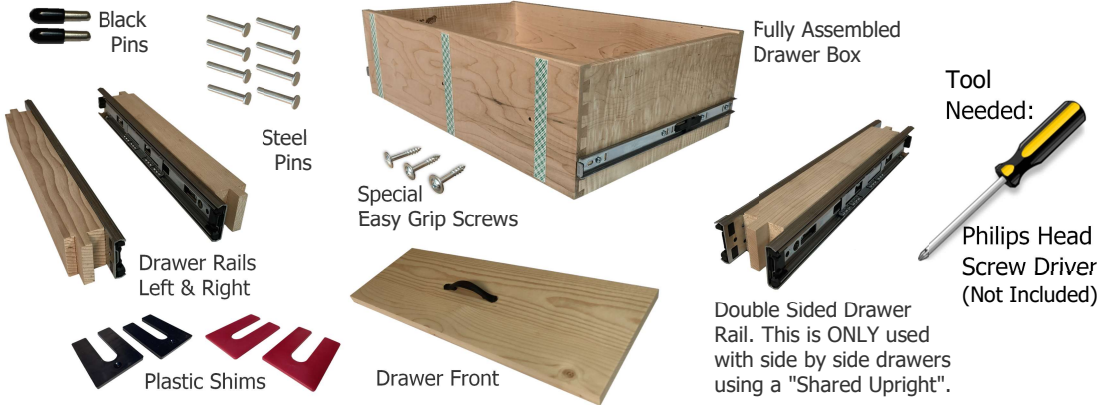



Start by setting Steel Pins in place to support drawer rails.

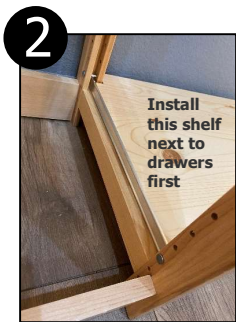


If you have a bottom shelf in the frame next to your drawers, install it before the rails.

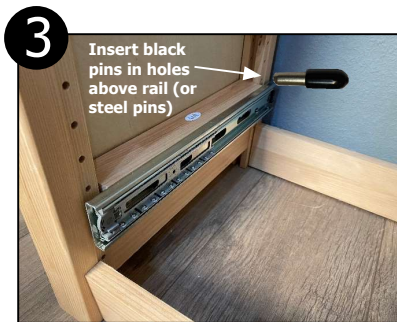

After the steel pins are set, insert Left and Right Drawer Rails to sit on top of the pins.
IMPORTANT: Insert a steel pin above on the rear upright for each Drawer Rail.
INSERT THE TOP STEEL PIN FROM THE OPPOSITE SIDE OF UPRIGHT. Or use our Black pins that are thinner and will be easier to slide over the drawer suspension.
VERY IMPORTANT: These pins will prevent the drawer from falling when pulled out.

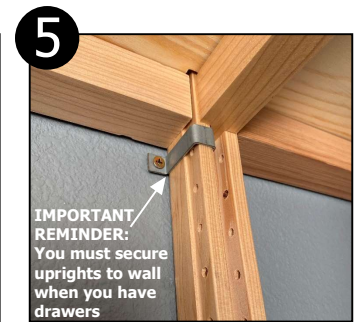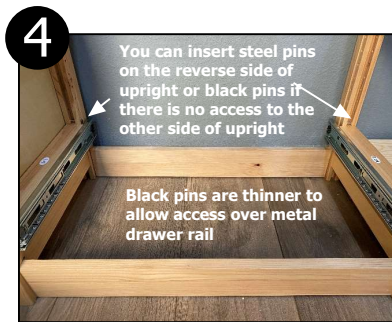



IMPORTANT: All frames must be secured to wall. See details on wall brackets.

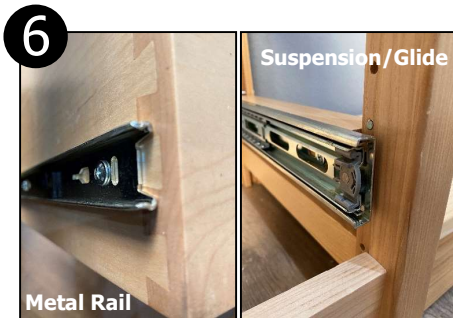

The metal rail on the drawer box will slide into the suspension/glide on the drawer rail.



Pull suspensions partly out as shown. Then carefully slide drawer into this part on both sides. This can be a little difficult at first. Once they are correctly seated you will need to push the drawer very firmly into place. You will hear a click. Then pull the drawer out and it should open and close easily.

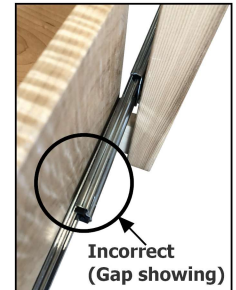
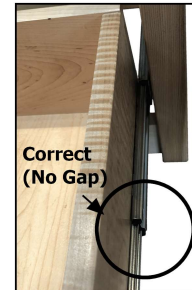


Important:

If you have any shelves in a frame next to your drawers, you will need to install these shelves as you install the drawer rails. Otherwise, you will not have room to slide the shelves in after drawer rails are installed.

Need to remove the drawer?

You can remove any drawer at any time. Look for a black lever on each side of the drawer suspension/glide. On the left side you will pull up to release. On the right side you will push down to release. Then pull out your drawer.

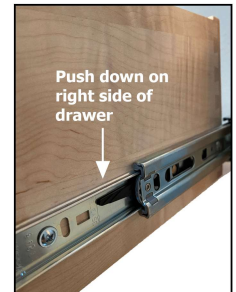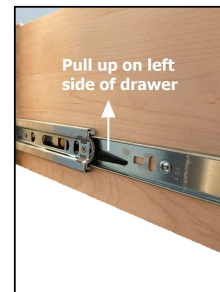

Questions? Call us Toll Free in US: (888) 989-1370
Monday - Friday, 8:30 - 5:00 Pacific Standard Time
After hours you can Email us at: installation@recomgroup.com

Drawer Installation




8



Set the 2nd set of Drawer Rails on the 3rd pin hole above the box just placed. Remember to add a pin above the Drawer Rail on the back upright to prevent the drawer from falling when it is pulled out. Use either the steel pin or gold pin depending on your access to the upright.

9

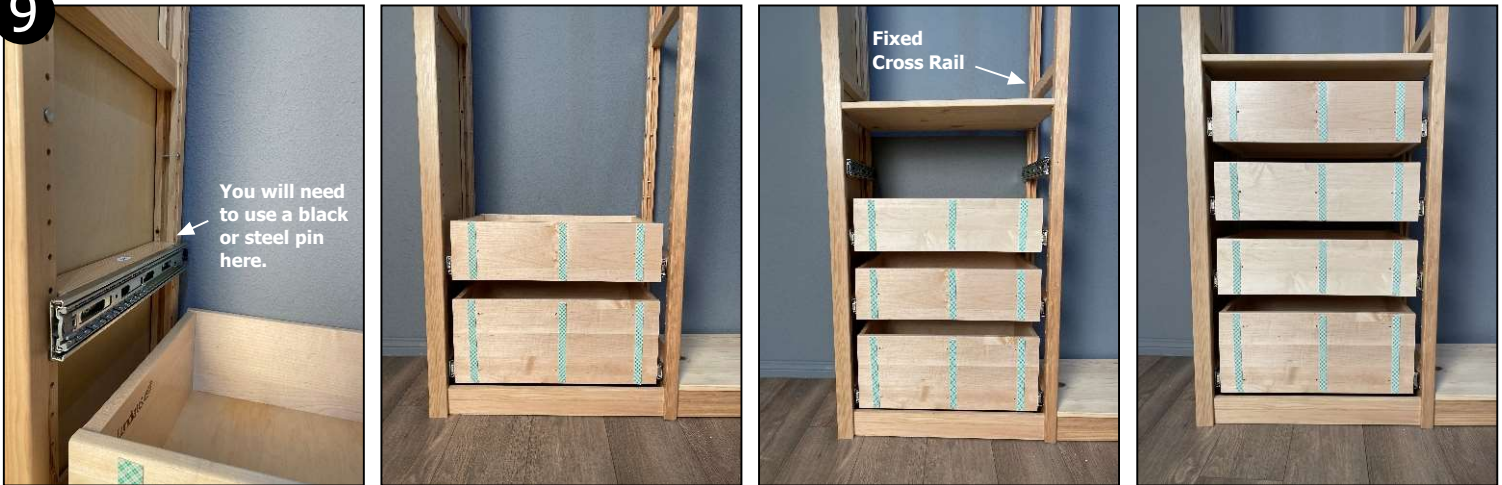

This is an example above where you have to use a Black Pin in the back of the upright above the rail.

Install all of your drawers first, before attaching any drawer fronts.

If you are installing a stack of 4 or more drawers, you may want to temporarily install the top shelf above your drawers first. Sometimes the fixed cross rail can make it difficult to install this shelf after drawers rails are installed.

10



Installing Drawer Fronts

Starting with the first drawer, set the BLACK Shims as shown above. Balance them on the cross rail. These are 1/4" thick and will set the first gap.

Important Tip:

**Do you have 4 or more stacked drawers?
Don't remove the protective layer off the tape yet!**



If you are installing a stack of four (4) or more drawers in a frame we recommend ONLY removing the protective film off the MIDDLE row(s) of tape as shown above. The purpose of the tape is to make installation easier. It is also to allow you to reposition a drawer front if needed. If you have every piece of tape removed, it will be much harder to remove the drawer front to reposition. You may need to use slightly larger gaps (Double red/pink shims) to create a more uniform appearance. Test this, by initially setting up all the drawer fronts with less tape. Set the shelf above the top drawer so that gap can be adjusted as well.

11



Starting with the first drawer box, peel the protective film off the strips of double sided tape. Place the drawer front by setting it on the shims and centering it so that the thin gaps on the left and right are equal. Press firmly. For the second drawer front and any additional fronts, you will use the RED Shims to set the proper gap. Now you will balance the shims on the lower drawer front. Set all remaining drawer fronts this way. The last drawer on top should have a shelf above it to close it off. The final step is permanently attaching the drawer fronts with screws. Working from the top drawer down secure the drawer fronts with screws as noted below. Remove each set of shims after you've installed screws.



12



Screw our "Easy Grip" screws through the drawer box into the Drawer Front for a permanent installation.

Trouble Shooting

We rarely have any issues with our drawers. However, we have included solutions below for possible problems you may be experiencing.

Gaps are not even

Solution 1: Your frame is not "Level". You will need to use a level against the upright to verify. If it is not level, you will need to reinstall your frames. Make sure the uprights and cross rails are level before securing frames to your wall.

Solution 2: You can remove a drawer front or drawer fronts by prying them off (You will need a flat head screw driver to help you do this). Reposition the front(s) and reattach with screws.

Drawer doesn't slide smooth

Solution: The drawer slides have not been inserted properly. Remove the drawer (See first page on how to remove a drawer). Reinstall the drawer.

If this does not help, you can reach us after hours by email at: Installation@RecomGroup.com

Or, you may call us during the week. We are open Monday through Friday, 8: 30am to 5:00pm Pacific Time.