


# Expansion Rod Installation


Components Include:

- 2 - Wood Support Rails  
(Drilled to hold Expansion Rod)
- 1 - Expansion Rod
- 4 - Steel Pins

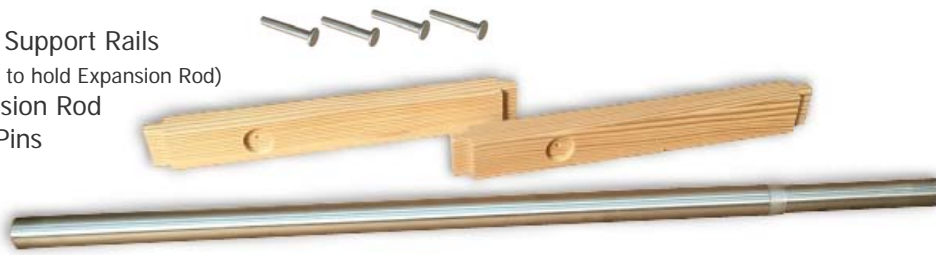

No tools needed

Use Expansion Bars between Starter Frames that are against closet walls on opposite sides. This component is a great solution for reach in closets or where custom hang bar lengths are needed.

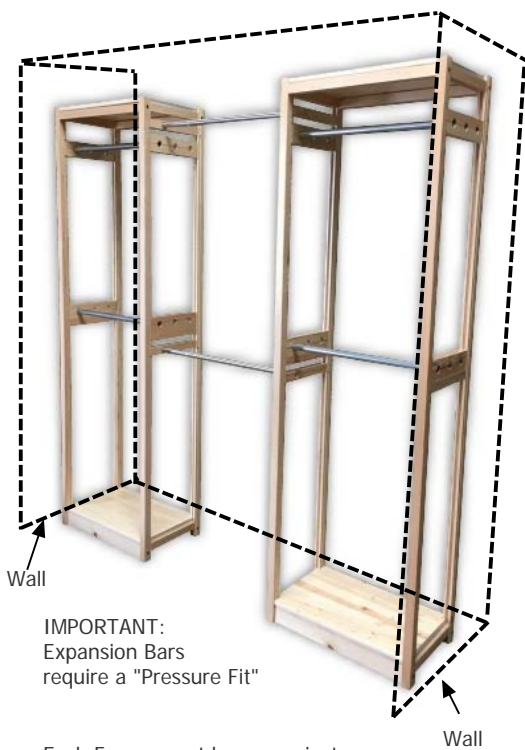

**IMPORTANT:**  
Expansion Bars require a "Pressure Fit"

Each Frame must be up against the closet walls on opposite sides to hold the pressure fit of Expansion Bar(s) in between.



To install, insert Wood Rails inside upright channels. Insert pins to secure. Height is adjustable in 1" increments.

## 4 steps to set your bar in place:



1. Extend Bar to size of opening.
2. Extend an extra 1"
3. Twist to Lock
4. Pull Back to add tension and fit in place.



Questions? Call us Toll Free in US: (888) 989-1370  
Monday - Friday, 8:30 - 5:00 Pacific Standard Time